

# USER INSTRUCTIONS

## ACCESS LEVEL 1

### - Normal Operation Mode

The "POWER ON" LED is lighting on in green.

### - FIRE Alarm Condition

The "GENERAL FIRE" LED is lighting on in red.  
The external sounders will sound and the buzzer inside the panel will sound.  
The alarm message "Evacuation" is displayed on the LCD screen.

### - To Silence the Internal Buzzer

Press the "Silence Buzzer" button.



### - To Activate the Sounders

In case of activated automatic or manual fire detector, press the "Evacuation" button.



### - To Perform Indication Test

Press the "Test" button to perform a common test of the internal buzzer signalization, LED and LCD display operation.



### Technical Support:

Tel.:.....

Mobile:.....

Contact person:.....

.....

### - Messages Review Mode

#### • ALARMS

The "GENERAL FIRE" LED is lighting on in red.  
Press button ① (Alarms) and use ▲▼ to review the list with alarm messages.

#### • TROUBLES

The "GENERAL FAULT" LED is lighting on in yellow.  
Press button ② (Troubles) and use ▲▼ to review the list with trouble messages.

#### • DISABLEMENTS

The "DISABLE" LED is lighting on in yellow.  
Press button ③ (Disablements) and use ▲▼ to review the list with messages for disablements.

#### • TESTS

The "TEST" LED is lighting on in yellow.  
Press button ② (Tests) and use ▲▼ to review the list with active tests.  
Or, press in sequence buttons ④ (More) - ② (Tests).

#### • WARNINGS

Press button ③ (Warnings) and use ▲▼ to review the list with warning messages.  
Or, press in sequence buttons ④ (More) - ③ (Warnings).

To exit the messages review mode, press the "CANCEL" button.



## ACCESS LEVEL 2/3

### - To Silence the Sounders

Enter Installer or Maintenance code.  
Press the "Silence Sounders" button.  
The yellow LED next to the button is lighting on.

CODE



To resound the sounders again press the "Silence Sounders" button one more time.  
The yellow LED lights off.

### - To Reset the System

Enter Installer or Maintenance code.  
Press the "Reset" button.

CODE



### - To Disable a Zone/ Device

Enter Installer or Maintenance code.  
Enter Menu 2) ZONES/ 3) DEVICES.  
Select a zone/ device number to disable.  
Press button ④ (Disable).  
Press button ② (This) or ③ (All).  
The "DISABLE" LED is lighting on in yellow.

### - To Enable a Zone/ Device

The "DISABLE" LED is lighting on in yellow.  
Enter Installer or Maintenance code.  
Enter Menu 2) ZONES/ 3) DEVICES.  
Select a zone/ device number to enable.  
Press button ④ (Enable).  
Press button ② (This) or ③ (All).